

Surface Applied Domes and Wayfinding Bars

Installation Instructions


Advantage One Surface Applied Domes and Wayfinding Bars are specifically designed for use when it is inappropriate or impossible to drill holes for the anchored version of Advantage One Domes/Wayfinding Bars.

1. Ensure the floor has been wiped clean with Acetone or equivalent solvent.
2. Installation on the floor's surface should occur right after removing the tape cover to ensure maximum adhesion. A thin blade tool, like a boxcutter, is required to lift and peel off the tape cover at the base of each dome/bar.

FOR SURFACE APPLIED DOMES

3. Align the dome template on the substrate where required and mark the edges to keep spacing uniform. Otherwise, a second template can be used to accomplish the same thing.
4. Guide markings on the template will ease this process.
5. Firmly press domes into template holes to create a strong bond.

NOTE: Each 100-dome box comes with a clear plastic template to use when installing in the prescribed dome pattern.

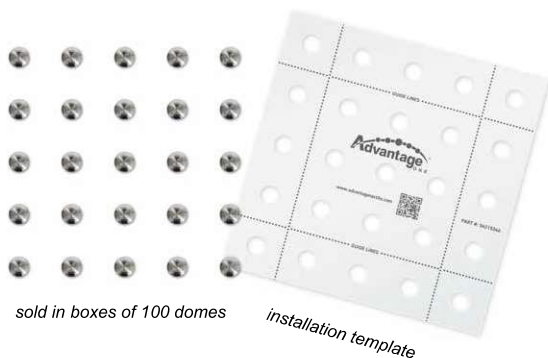

FOR SURFACE APPLIED WAYFINDING BARS

6. Two templates are required.
7. After the substrate is wiped clean, align the first template on the floor where needed.
8. Remove the bottom tape cover and firmly press bars into slots.
9. Using the second template, align it with the first template to

continue the path as needed.
10. During markings will ease this process as well.

NOTE: Orders of Wayfinding Bars will come with two templates for installation.



IMPORTANT: The permanent tape adheres well to most floor surfaces: wood, concrete, ceramic tile, stone, and metal. However, the life span of the adhesion will be limited if automatic floor cleaners are used.